



GENUINE PARTS

INSTALLATION INSTRUCTIONS

- DESCRIPTION:** Front Splash Guard Kit
- APPLICATION:** 370Z
- PART NUMBER:** 999J2 ZVxxx03
- KIT CONTENTS:**

Item	QTY	Description	Part Number
A	1	Splash Guard – Front Right	---
B	1	Splash Guard – Front Left	---
C	4	Screw	14-51 00891
D	2	Push Pin	11296 AG000
E	1	Installation Instructions	999J2 ZV003 II



A



B



C



D



E

5. TOOLS REQUIRED:

- clean, lint-free wiping cloth
- mild soap/water mixture or isopropyl alcohol
- #2 phillips screwdriver
- awl
- drill
- 2mm (3/32") drill bit
- 5mm (3/16") drill bit
- 8mm (5/16") drill bit


6. PRE-INSTALLATION NOTES:

- These installation instructions are for the left side of the vehicle; the same procedure applies to the right side.

INSTALLATION INSTRUCTIONS - Front Splash Guard Kit


7. INSTALLATION PROCEDURE:

Fig 1

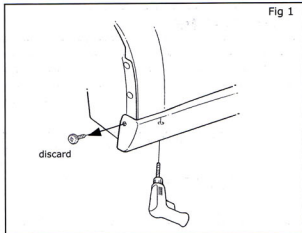

- 1) Remove existing fasteners.
 - a) Remove and discard screw.
 - b) Drill out rivet with 5mm (3/16") bit.
 - c) Enlarge hole for push pin with 8mm (5/16") bit.
 - d) Clean installation surface.

Fig 2a

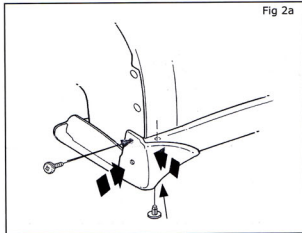


- 2) Install front splash guard.
 - a) Align splash guard to vehicle.
 - b) Install supplied push pin in lower underside hole.
 - c) Install supplied screw in top hole, while holding part up and into body panel.

DO NOT OVER TIGHTEN SCREW

NOTE:

HOLD THE SPLASH GUARD TIGHT TO THE VEHICLE WHILE TIGHTENING THE SCREWS TO ENSURE NO GAP OCCURS BETWEEN FENDER AND SPLASH GUARD.


Fig 2d

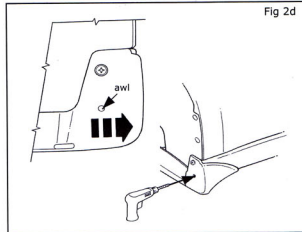

- d) Pull outward on splash guard to close any gap to rocker panel and mark outboard edge of hole with awl.
- e) Drill a 2mm (3/32") pilot hole.

INSTALLATION INSTRUCTIONS - Front Splash Guard Kit

Fig 2f

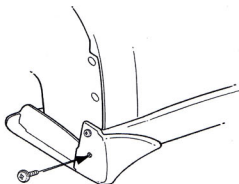

- f) Install supplied screw.
DO NOT OVERTIGHTEN